




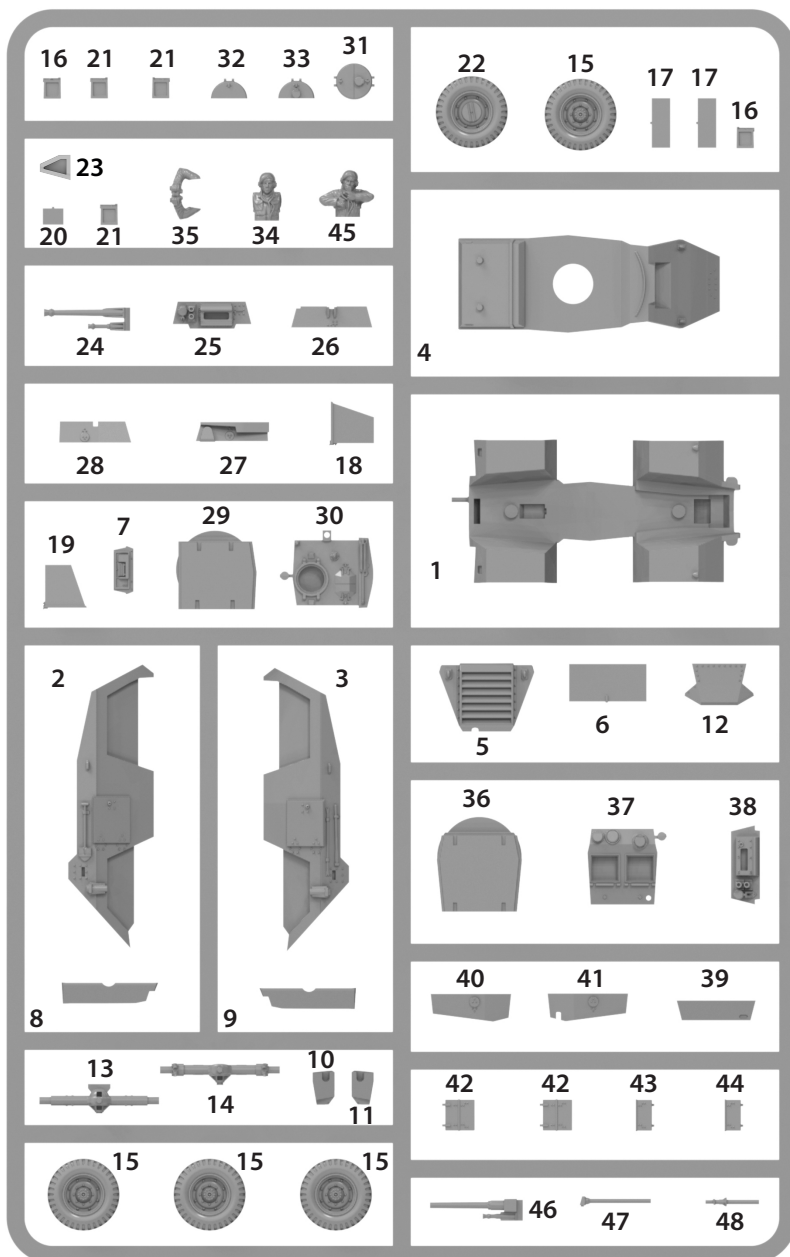


### Step I.

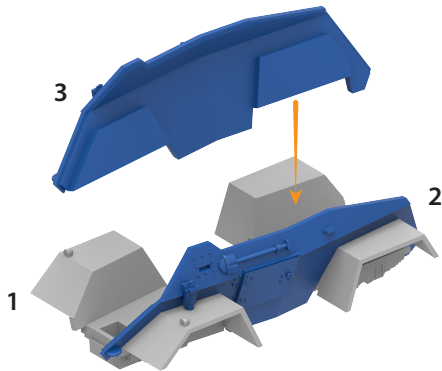


### Step II.

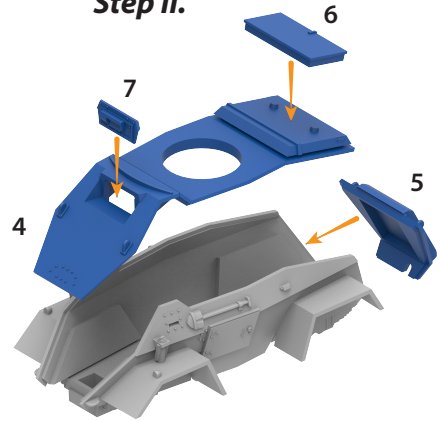

### Step III.

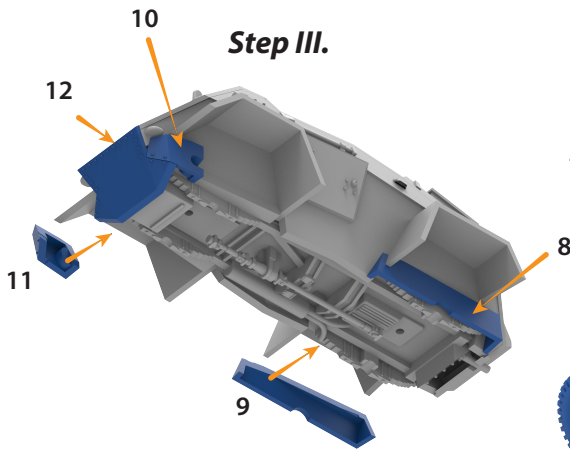


### Step IV.

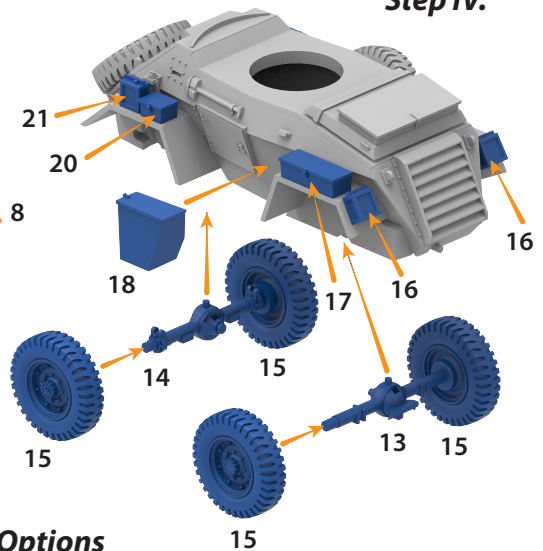


### Variant Options

#### Step V. (Humber AC Mk.II)

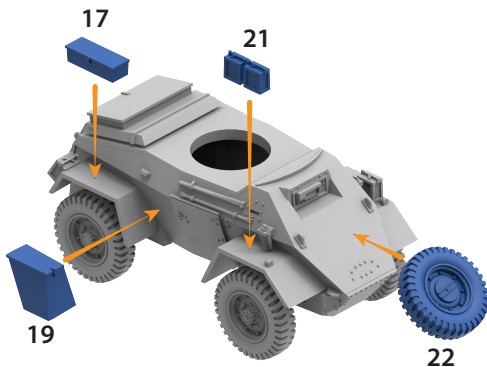


#### Step V. (Humber AC Mk.IV)

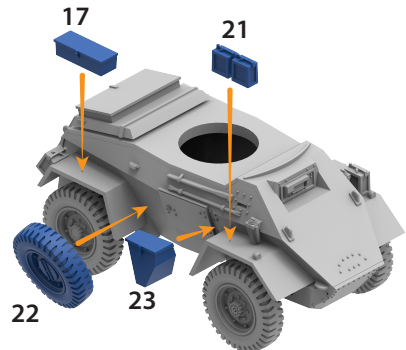





### Step VI. (Humber AC Mk.II)

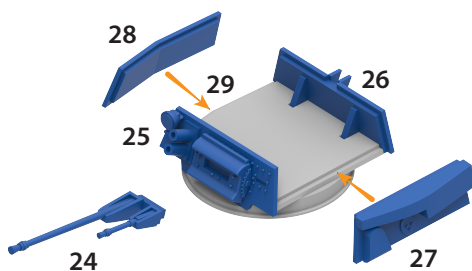


### Step VII. (Humber AC Mk.II)

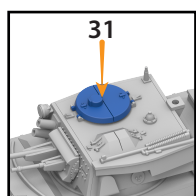


Closed hatch option

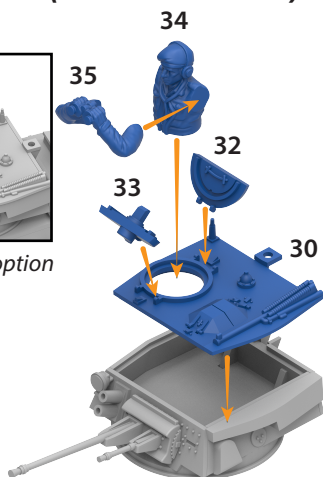


### Step VIII. (Humber AC Mk.II)

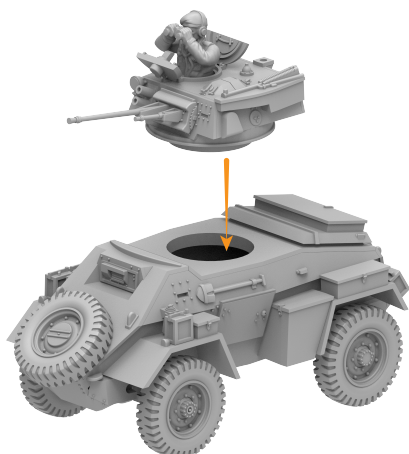


### Step VI. (Humber AC Mk.IV)

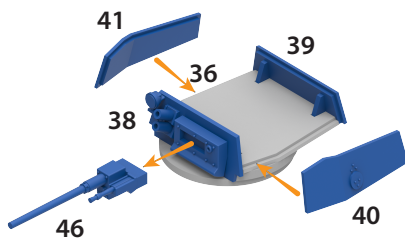


### Step VII. (Humber AC Mk.IV)

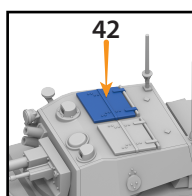

Closed hatch option

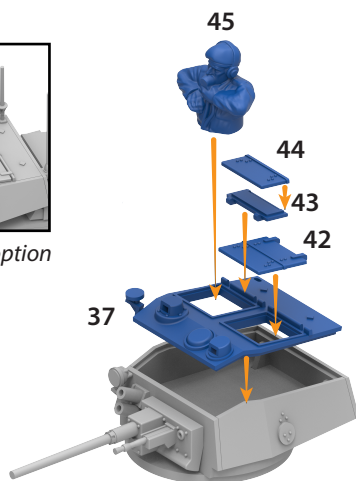



### Step VIII. (Humber AC Mk.IV)

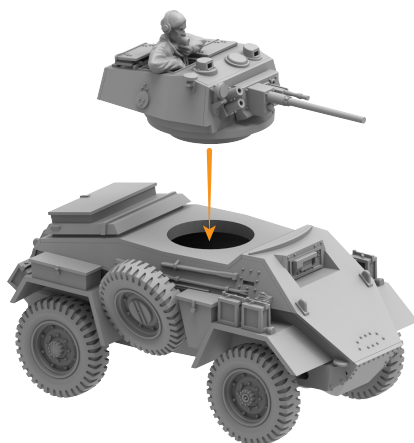

# Paint and Marking Guide

## *7th Armoured Division, 1942*

All over British Light Stone No. 61, Slate No. 34 patches

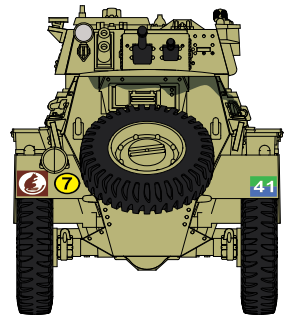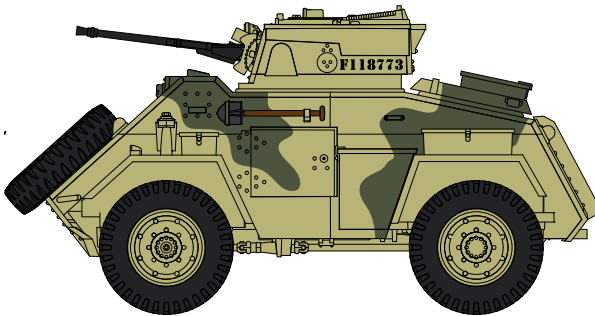

## *11th Armoured Division, 1944*

All over British Bronze Green

